 


 

 

 

 

 
 

 
 
 
 







 
 
 


 







Originalfernbedienung Ersatzfernbedienung

	On/Standby		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	10		0
	+10		Guide
	+100		Pre Ch
	Display		Info
	Cancel		Back
	Set		Menu
	Sleep		Sleep

Originalfernbedienung Ersatzfernbedienung

	Group Up		Up
	Group Down		Down
	>>I		>>I
	>>I		Right
	I<<<		I<<<
	I<<<		Left
	Stop		Stop
	Stop		Ok
	Play Mode	 + 	Shift + Play
	AUX		Red
	Play/Pause CD		Play
	<> Tape		Yellow
	Tuner Band		Blue
	Repeat		Text
	Reverse Mode		TV/R
	FM Mode		Media
	Sound		Dual





Originalfernbedienung Ersatzfernbedienung

	ACS		Smart
	Vol+		Vol +
	Vol-		Vol -
	Super Woofer		Ch +
	Super Woofer Volume-		Ch -
	Clock Timer		AV

Originalfernbedienung Ersatzfernbedienung

