


 
 
 

 

 

 
 

 


 





 

 

 

 

 

 
 





 



 


 





 
 



 
 

 




 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Tv/Rad		TV/R
	Search		Shift + TV/R
	Live Zoom		Eject
	*		Menu
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Guide		Guide

Originalfernbedienung Ersatzfernbedienung

	Q.View		D. Menu
	FAV/Quick		Pre Ch
	Info		Info
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	P+		Ch +
	P-		Ch -
	Netflix		Shift + Media
	Home		Smart
	Amazon		Media
	Text		Text
	Back		Back
	T.Opt/Magic Link		Options
	Exit		Exit
	Up		Up
	Down		Down





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Right		Right
	Left		Left
	OK		Ok
	AD/*		Subt
	Rec		Rec
	Stop		Stop
	<<		<<
	Play		Play
	Pause		Pause
	>>		>>
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

