 

 





 

 
 


 
 




**Originalfernbedienung Ersatzfernbedienung**

	Power DVD		Power
	Select Drive		Smart
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Delete/*		D. Menu
	Input Select		AV
	CH/Page Up		Ch +
	CH/Page Down		Ch -
	ShowView		Pre Ch

**Originalfernbedienung Ersatzfernbedienung**

	Prog/Check		Sleep
	I<< Skip		I<<
	Skip >>I		>>I
	<< Slow/Search		<<
	Slow/Search >>		>>
	Stop		Stop
	Play/x1.3		Play
	Pause		Pause
	i/Status		Media
	Exit		Exit
	Option		Options
	Return		Back
	Function Menu		Menu
	Direct Navigator		List
	Guide		Guide
	Up		Up
	Down		Down






 








**Originalfernbedienung Ersatzfernbedienung**

	Right/ II>		Right
	Left/<II		Left
	OK		Ok
	Red		Red
	Green		Green
	Yellow/Create Chapter		Yellow
	Blue/Manual Skip		Blue
	Rec		Rec
	Rec Mode	 + 	Shift + Rec
	EXT Link		Text
	Direct Tv Rec		TV/R
	Audio		Dual
	[≡◆]/STTL		Subt
	Display		Info
	Time Slip		3D
	Power Tv	 + 	Shift + Power
	AV Tv	 + 	Shift + AV

**Originalfernbedienung Ersatzfernbedienung**

	CH+ Tv	 + 	Shift + Ch +
	CH- Tv	 + 	Shift + Ch -
	Vol+ Tv		Vol +
	Vol- Tv		Vol -

