







Originalfernbedienung Ersatzfernbedienung

	Open / Close		Eject / Surround
	Display		Display / Media
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	10+		Guide / EPG / -/-
	GOTO	 + 	Shift + Text /
	Title / TTX		Text / Goto
	Title / TTX		Sound / Title

Originalfernbedienung Ersatzfernbedienung

	Subtitle		Subtitle / EQ
	Angle		Info / Angle
	Language		Audio / Lang I/II
	Menu		Menu / Home
	Up / CH +		CH+ / Page+
	Up / CH +		Up
	Setup		Setup / OPT /
	Left		Left
	Enter		OK
	Right		Right
	<<		<< / Tune-
	Down / CH -		Down
	Down / CH -		CH- / Page-
	>>		>> / Preset+
	>>		>> / Tune+
	Play / Pause		Pause / Step / Freeze
	Play / Pause		Play / Slow





Originalfernbedienung **Ersatzfernbedienung**

	I<<		I<< / Preset-
	Vol -		Vol-
	Vol +		Vol+
	Stop		Stop / Hold
	Switch		Smart / List
	Zoom		Zoom / Size
	Mute		Mute / Dimmer
	TV / Radio		TV/Radio /
	RAN		Blue / Prime Video / Random
	PBC		Fav / Marker / PC
	Return		Back / Return
	L / R		Sleep / Timer
	N / P		AV / Input / RDS
	Slow	+	Shift + Play /
	Repeat		Green / APP / Repeat
	Prog / EPG	+	Shift + Guide / EPG / -/-
	Prog / EPG	+	Shift + TV/Radio / Program

Originalfernbedienung **Ersatzfernbedienung**

	Video	+	Shift + 4
	CD Ripping		Picture / Format
	A - B		Yellow / YouTube / Repeat

