



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Play		Play / Slow
	[≡]		Text / Goto
	Pause/[≡]		Pause / Step / Freeze
	Stop/[≡+]		Stop / Hold
	Rec/[≡◇]		Rec / Rec Mode
	<</[≡o]		<< / Tune-
	<</[≡i]		<< / Preset-
	>> /[≡?]		>>  / Preset+
	>>/[≡x]		>> / Tune+
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	ANT		D.Menu / Top
	Tools		Setup / OPT /
	1		1
	2		2

Originalfernbedienung Ersatzfernbedienung

	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Menu		Menu / Home
	0		0
	Exit		Exit / Cancel / Clear
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Back		Back / Return
	Home/Source		Shift + Menu / Home





**Originalfernbedienung Ersatzfernbedienung**

	Vol+		Vol+
	APPS		Shift + Green / APP / REPEAT
	P+		CH+ / Page+
	Vol-		Vol-
	P-		CH- / Page-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	EPG		Guide / EPG / -/--
	List		Smart / List
	FAV		Fav / Marker / PC

**Originalfernbedienung Ersatzfernbedienung**


