







 
















 

 










Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Dimmer		Options
	Clock		Shift + AV
	Sleep		Sleep
	Internet Radio		TV/R
	Online Music		Media
	Music Server		Smart
	Tuner		Green
	Analog In		Red
	Digital In		Blue
	USB		AV
	Bluetooth		Format
	CD		Yellow
	CH+		Ch +
	CH-		Ch -
	I<<		I<<
	Play		Play




 
 
















 

 
 

Originalfernbedienung Ersatzfernbedienung

	Pause		Pause
	>>I		>>I
	<</Tune-		<<
	Stop		Stop
	>>/Tune+		>>
	ADD		Back
	Call/Favorites		Pre Ch
	DBB/Tone		List
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Info		Info
	Volume A/B		D. Menu
	Search		Shift + TV/R
	Setup		Menu
	Up		Up
	Down		Down

 

 
 




Originalfernbedienung Ersatzfernbedienung

	Right		Right
	Left		Left
	Enter		Ok
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	+10		Guide
	Clear		Exit
	X/Random		3D
	Repeat		Text

Originalfernbedienung Ersatzfernbedienung

	Mode/Program		Subt
	A/B Speaker		Dual

