 





 

 

 

 

 

















 









Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Source		AV / Input / RDS
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	I/II/Audio		Audio / Lang I/II
	P.Size		Zoom / Size
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

Originalfernbedienung Ersatzfernbedienung

	-/--		Shift + Guide / EPG / -/--
	Jump		Smart / List
	Menu		Menu / Home
	Info		Info / Angle
	Sleep		Sleep / Timer
	Exit		Exit / Cancel / Clear
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Vol+		Vol+
	Vol-		Vol-
	P-		CH- / Page-
	P+		CH+ / Page+
	Red/D.Setup		Red / Netflix / Search
	Red/D.Setup		Setup / OPT /



[illegible]