


 

 







 







 
 
 

 

 



 




 










 
 

 

 


 

 




Originalfernbedienung    Ersatzfernbedienung

	Power		Power
	Netflix		Media
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TV		TV/R
	Recall		Pre Ch
	V +		Vol +
	V -		Vol -




 

 

 

 

 
 
 

 


 
 

 



 



 
 

 

Originalfernbedienung    Ersatzfernbedienung

	Mute		Mute
	Home		Smart
	P +		Ch +
	P -		Ch -
	Menu		Menu
	Q.Menu		D. Menu
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	OK		Ok
	Back		Back
	Exit		Exit
	i		Info
	Video		Shift + Smart
	EPG		Guide
	YouTube		Shift + Media





**Originalfernbedienung   Ersatzfernbedienung**

	Fav 2		Shift + Pre Ch
	TXT		Text
	Lang.		Dual
	Subt.		Subt
	Aspect		Format
	<<		<<
	<<		I<<
	Pause		Pause
	>>		>>
	>>		>>I
	Red		Rec
	Play		Play
	Stop		Stop
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

**Originalfernbedienung   Ersatzfernbedienung**