








 
 

 

 

 






Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------------|---|-------------------|
|  | Standby |  | Power |
|  | 1/VCR/DVR |  | 1 |
|  | 2/CBL/SAT |  | 2 |
|  | 3/Game/TV |  | 3 |
|  | 4/AUX |  | 4 |
|  | 5/Multi CH |  | 5 |
|  | 6/DVD |  | 6 |
|  | 7/Tape |  | 7 |
|  | 8/Tuner |  | 8 |
|  | 9/CD |  | 9 |
|  | +10/10/-/-/D.Tun |  | Guide / EPG / -/- |
|  | 0/11/Dimmer |  | 0 |
|  | CLR/12/Sleep/Ent |  | Fav / Marker / PC |
|  | CH Disc |  | CH+ / Page+ |
|  | CH Disc Album- |  | CH- / Page- |
|  | Vol+ |  | Vol+ |
|  | Vol- |  | Vol- |













 


 


 
 



 


Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------------------|---|-----------------------|
|  | Up |  | Up |
|  | Previous Menu/Muting |  | Menu / Home |
|  | Left/Playlist/Cat |  | Left |
|  | Enter |  | OK |
|  | Right/Playlist/Cat |  | Right |
|  | Setup |  | Setup / OPT / |
|  | Down |  | Down |
|  | Return |  | Back / Return |
|  | Pause/< |  | Pause / Step / Freeze |
|  | Play |  | Play / Slow |
|  | Stop |  | Stop / Hold |
|  | << |  | << / Tune- |
|  | >> |  | >> / Tune+ |
|  | Stereo |  | Sound / Title |
|  | Surround |  | Eject / Surround |
|  | < Listening Mode |  | Shift + Left |
|  | Listening Mode > |  | Shift + Right |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------------------|---|-------------------|
|  | Standby |  | Power |
|  | 1/VCR/DVR |  | 1 |
|  | 2/CBL/SAT |  | 2 |
|  | 3/Game/TV |  | 3 |
|  | 4/AUX |  | 4 |
|  | 5/Multi CH |  | 5 |
|  | 6/DVD |  | 6 |
|  | 7/Tape |  | 7 |
|  | 8/Tuner |  | 8 |
|  | 9/CD |  | 9 |
|  | +10/10/-/-/D.Tun |  | Guide / EPG / -/- |
|  | 0/11/Dimmer |  | 0 |
|  | CLR/12/Sleep/Ent |  | Fav / Marker / PC |
|  | Guide/Top |  | D.Menu / Top |
|  | Up |  | Up |
|  | Previous Menu/Muting |  | Menu / Home |
|  | Left/Playlist/Cat |  | Left |







 
 
 


 


 
 
Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------------|---|-----------------------|
|  | Enter |  | OK |
|  | Right/Playlist/Cat |  | Right |
|  | Setup |  | Setup / OPT / |
|  | Down |  | Down |
|  | Return |  | Back / Return |
|  | Pause/< |  | Pause / Step / Freeze |
|  | Play |  | Play / Slow |
|  | Stop |  | Stop / Hold |
|  | << |  | << / Tune- |
|  | >> |  | >> / Tune+ |
|  | I<< |  | I<< / Preset- |
|  | >>I |  | >>I / Preset+ |
|  | Stereo |  | Sound / Title |
|  | Surround |  | Eject / Surround |
|  | < Listening Mode |  | CH- / Page- |
|  | Listening Mode > |  | CH+ / Page+ |
|  | Test Tone/Audio |  | Audio / Lang I/II |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------------|---|-------------------|
|  | Standby |  | Power |
|  | 1/VCR/DVR |  | 1 |
|  | 2/CBL/SAT |  | 2 |
|  | 3/Game/TV |  | 3 |
|  | 4/AUX |  | 4 |
|  | 5/Multi CH |  | 5 |
|  | 6/DVD |  | 6 |
|  | 7/Tape |  | 7 |
|  | 8/Tuner |  | 8 |
|  | 9/CD |  | 9 |
|  | +10/10/-/-/D.Tun |  | Guide / EPG / -/- |
|  | 0/11/Dimmer |  | 0 |
|  | CLR/12/Sleep/Ent |  | Fav / Marker / PC |
|  | Disc/Album |  | CH+ / Page+ |
|  | Disc/Album CH- |  | CH- / Page- |
|  | Vol+ |  | Vol+ |
|  | Vol- |  | Vol- |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------------|---|-----------------------------|
|  | Pause/< |  | Pause / Step / Freeze |
|  | Play |  | Play / Slow |
|  | Stop |  | Stop / Hold |
|  | << |  | << / Tune- |
|  | >> |  | >> / Tune+ |
|  | 1<< |  | 1<< / Preset- |
|  | >>1 |  | >>1 / Preset+ |
|  | Stereo |  | Audio / Lang I/II |
|  | Surround |  | Eject / Surround |
|  | < Listening Mode |  | Left |
|  | Listening Mode > |  | Right |
|  | Level-/Random |  | Blue / Prime Video / Random |
|  | Level+/Repeat |  | Green / APP / Repeat |
|  | Display |  | Display / Media |
| | | | |
| | | | |
| | | | |



