
 


 












 

 





 
 
 
 




 




Originalfernbedienung Ersatzfernbedienung

	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	10/0		0
	>10		Guide
	CLR		Pre Ch
	Play Mode		Shift + Play
	Group Search		TV/R
	Memory		Rec
	Enter		Ok
	Band		Green

Originalfernbedienung Ersatzfernbedienung

	FM Mode		Red
	Tuner Preset+		Up
	Tuner Preset-		Down
	Tuning Up		Right
	Tuning Down		Left
	Input Up		Ch +
	Input Down		Ch -
	Dimmer		Media
	Display		Info
	Vol+		Vol +
	Vol-		Vol -
	Muting		Mute
	Pause		Pause
	Play		Play
	Stop		Stop
	<<		<<
	>>		>>





Originalfernbedienung Ersatzfernbedienung

	I<<		I<<
	>>I		>>I
	Random		Options
	Repeat		Text
	Scroll		3D
	Play List Up		List
	Play List Down		Sleep
	Album Up		Subt
	Album Down		Format
	Menu		Menu
	Select		Back
	: Up		Blue
	: Down		Yellow

Originalfernbedienung Ersatzfernbedienung