






 





 

 


 






 

 




 
 


 
 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Tv/Radio		TV/R
	Mute		Mute
	Info		Info
	Menu		Menu
	Exit		Exit
	FAV		Pre Ch
	P/L		Smart
	Teletext		Text
	M/A		Options
	ALT		Dual
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Vol+		Vol +

Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol -
	PG+		Ch +
	PG-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

