



 
 
 
 
 











 





 
 
 

 
 
 



 



 
 
 
 
 




 
 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Voyo		Smart
	Guide		Guide
	List		List
	Info		Info
	Vol+		Vol +
	Vol-		Vol -
	P+		Ch +
	P-		Ch -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Red		Red
	Green		Green
	Yellow		Yellow





 
 
 

 

 









 



 

 
 
 

 



Originalfernbedienung Ersatzfernbedienung

	Blue		Blue
	Back		Back
	Exit		Exit
	Stop		Stop
	<<		<<
	Play		Play
	Pause		Pause
	>>		>>
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9

 

 
 
 

 
 
 
 
 
 
 
 
 


 
 
 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Voyo		Smart
	Guide		Guide
	List		List
	Info		Info
	Vol+		Vol +
	Vol-		Vol -
	P+		Ch +
	P-		Ch -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Red		Red
	Green		Green
	Yellow		Yellow

 

 
 
 




Originalfernbedienung Ersatzfernbedienung

	Blue		Blue
	Back		Back
	Exit		Exit
	Stop		Stop
	<<		<<
	Play		Play
	Pause		Pause
	>>		>>
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9





Originalfernbedienung Ersatzfernbedienung

	0		0
	Menu		Menu
	Options		Options
	Text		Text
	Tv/Rad		TV/R
	APP		Media
	Source		AV
	I<<		I<<
	Rec		Rec
	File		Pre Ch
	>>I		>>I

Originalfernbedienung Ersatzfernbedienung

