 
 

 

 












Originalfernbedienung Ersatzfernbedienung




 
 


 

 

 

 







 


 
 


	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	FAV		Pre Ch
	TXT		Text
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

Originalfernbedienung Ersatzfernbedienung

	Guide		Guide
	?		Dual
	Exit		Exit
	Menu		Menu
	Tools		Options
	Back		Back
	@		Smart
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Source		AV
	P+		Ch +





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	P-		Ch -				
	I<		I<<				
	>I		>>I				
	<<		<<				
	>>		>>				
	Rec		Rec				
	Play		Play				
	Pause		Pause				
	Stop		Stop				
	3D		3D				
	OQ		Format				
	[...]..		Subt				
	Netflix		Shift + Media				
	My Media		Media				

