

 
 

 

 

 







 
 
 



 

 

 

 




 
 
 







 

 



 



 



 

 

 
 





Originalfernbedienung Ersatzfernbedienung

	On/Standby		Power
	Memory		Menu
	Clear/Dimmer		Exit
	Select Disc 1		Shift + 1
	Select Disc 2		Shift + 2
	Select Disc 3		Shift + 3
	Select Disc 4		Shift + 4
	Select Disc 5		Shift + 5
	Random CD		Media
	Pause CD		Pause
	Stop CD		Stop
	Play CD		Play
	CD		Yellow
	Tuner (Band)		Green
	Video/AUX/USB		Red
	Pause USB		Shift + Pause
	Play USB		Shift + Play

Originalfernbedienung Ersatzfernbedienung

	Stop USB		Shift + Stop
	Tuning/Cursor Up		Up
	Tuning/Cursor Down		Down
	Tuning/Cursor Right/Presets		Right
	Tuning/Cursor Left/Presets		Left
	Display		Info
	Folder		Smart
	Clock/Timer		AV
	RDS ASPM		TV/R
	RDS PTY		Format
	RDS Display		3D
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6





Originalfernbedienung    Ersatzfernbedienung

	7		7
	8		8
	9		9
	0		0
	+10		Guide
	Equalizer Mode		Dual
	X.Bass/Demo		Subt
	Vol+		Vol +
	Vol-		Vol -

Originalfernbedienung    Ersatzfernbedienung