



 
 



 

 
 
 
 

 
 
 
 

 


 
 






 




 




 
 
 
 
 
 

 

 



 


 


 










Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Power		Power
	Netflix		Media
	TV		TV/R
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Eco		3D
	Source		AV
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	[i]		Info
	P+		Ch +
	P-		Ch -
	*		Menu
	Home		Smart
	Guide		Guide
	≡		Options
	Back		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Exit		Exit
	Zoom+		Shift + Ch +
	Zoom-		Shift + Ch -





Originalfernbedienung    Ersatzfernbedienung

	List		List
	Sleep		Sleep
	PRE-CH		Pre Ch
	FAV		Shift + Pre Ch
	Rec		Rec
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Lang		Dual
	Subtitle		Subt
	Text		Text
	I<		I<<
	Stop		Stop
	Play		Play
>I button icon"/>	>I		>>I
<< button icon"/>	<<		<<

Originalfernbedienung    Ersatzfernbedienung

	Pause		Pause
	>>		>>

