



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Shift + Guide / EPG / -/--
	Recall		Back / Return
	Sleep		Sleep / Timer
	Audio		Audio / Lang I/II
	Aspect		Shift + Picture / Format

Originalfernbedienung Ersatzfernbedienung

	Input		AV / Input / RDS
	Info		Info / Angle
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		OK
	Vol+		Vol+
	Vol-		Vol-
	FAV		Fav / Marker / PC
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	CH+		CH+ / Page+
	CH-		CH- / Page-
	Red		Red / Netflix / Search





**Originalfernbedienung    Ersatzfernbedienung**

	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Home		Shift + Menu /
	Setup		Setup / OPT /
	Refresh		Display / Media
	Text		Text / Goto
	Play		Play / Slow
	EPG/Mouse		Guide / EPG / -/--
	I<<		I<< / Preset-
	Stop/Reveal		Stop / Hold
	Rec		Rec / Rec Mode
	Size		Zoom / Size
	Pause/Mix		Pause / Step / Freeze
	<</Hold		<< / Tune-
	Tv/Radio		TV/Radio /
	>>/Subpage		>> / Tune+

**Originalfernbedienung    Ersatzfernbedienung**

	Index		Smart / List
	Sub-T		Subtitle / EQ
	>>I/Cancel		>>I / Preset+
	T-Shift		Eject / Surround

