

 


 


 


 


 

 
 
 
 

 




 
 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Eject/Open-Close		Eject
	DVD		Blue
	VCR		Yellow
	AV/Input		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	I.Skip		Guide
	Dubbing		Media

Originalfernbedienung Ersatzfernbedienung

	<</Backward		<<
	>>/Forward		>>
	I<< Skip		I<<
	Skip >>I		>>I
	Pause/Step		Pause
	Play		Play
	Stop		Stop
	Disc Menu/List		Menu
	Home		Smart
	Display		Info
	Return		Back
	PR/CH(TRK)+		Ch +
	PR/CH(TRK)-		Ch -
	Up		Up
	Down		Down
	Right		Right
	Left		Left

 





 





Originalfernbedienung Ersatzfernbedienung

	Enter		Ok
	O)/Audio		Dual
	[...]/Subtitle		Subt
	Zoom		Shift + Eject
	CHP.ADD		Text
	Rec		Rec
	Rec Mode		Shift + Rec
	Title		3D
	Thumbnail		Green
	Play Mode		Shift + Play
	Marker		Options
	Search		Shift + TV/R
	Clear		Exit
	Tv/VCR		TV/R
	*		Mute
	Power Tv		Shift + Power
	AV/Input Tv		Shift + AV

Originalfernbedienung Ersatzfernbedienung

	PR/CH- Tv		Shift + Ch -
	PR/CH+ Tv		Shift + Ch +
	Vol+ Tv		Vol +
	Vol- Tv		Vol -

