 




**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TV		TV/R
	Recall		Pre Ch
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute

**Originalfernbedienung    Ersatzfernbedienung**

	World/Internet		Smart
	P+		Ch +
	P-		Ch -
	Menu		Menu
	Q.Menu		D. Menu
	Back		Back
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	i		Info
	Photo/Music/Cam		Media
	Guide		Guide
	*/O		Format
	*/Q		3D



