







 

 

 

 

 

 

 





 
 










Originalfernbedienung Ersatzfernbedienung

	Power		Power
	i		Info / Angle
	Analog Menu		Menu / Home
	Digital Menu		D.Menu / Top
	1		1
	2		2
	3		3
	Input Select		AV / Input / RDS
	4		4
	5		5
	6		6
	TV/DVB-T		Display / Media
	7		7
	8		8
	9		9
	Guide (EPG)		Guide / EPG / -/-
	Timer		Sleep / Timer



 






 



 




Originalfernbedienung Ersatzfernbedienung

	0		0
	Mute		Mute / Dimmer
	Exit		Exit / Cancel / Clear
	Vol+		Vol+
	Up		Up
	P+		CH+ / Page+
	Left		Left
	Enter/CH List		OK
	Enter/CH List		Smart / List
	Right		Right
	Vol-		Vol-
	Down		Down
	P-		CH- / Page-
	TV/Radio		TV/Radio /
	[≡]		Text / Goto
	[≡o] [≡o]/P↔P		Back / Return
	Picture Size		Picture / Format





**Originalfernbedienung   Ersatzfernbedienung**

	[...]		Subtitle / EQ
	Freeze / [=+]		Pause / Step / Freeze
	[≡◇]		Zoom / Size
	[≡?]		Setup / OPT /
	Audio I/II		Audio / Lang I/II
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

**Originalfernbedienung   Ersatzfernbedienung**