

















 










 





 
 
 



 
 










 
 


 
 
 










Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------------|---|-------|
|  | Power |  | Power |
|  | Open/Close |  | Eject |
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |
|  | F |  | Menu |
|  | Mute |  | Mute |
|  | Preset/Folder Up |  | Ch + |
|  | Prset/Folder Down |  | Ch - |
|  | Jukebox/Memor |  | Red |
|  | Auto Dj |  | Green |
|  | Delete |  | Blue |
|  | Repeat |  | Text |
|  | Stop |  | Stop |
|  | >>I/Tuning+ |  | >>I |
|  | I<</Tuning- |  | I<< |
|  | Play / Pause |  | Pause |
|  | Play / Pause |  | Play |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------------|---|------------|
|  | Equalizer |  | Options |
|  | Special EQ |  | Dual |
|  | (i) |  | Info |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | Clock |  | Shift + AV |
|  | Alarm |  | Smart |
|  | Voice Canceller |  | Yellow |
|  | Sleep |  | Sleep |





Originalfernbedienung Ersatzfernbedienung

| Originalfernbedienung | Ersatzfernbedienung |
|-----------------------|---------------------|
| RDS/Set | Media |
| Key Changer # | TV/R |
| Key Changer b | 3D |
| Mic Echo | Subt |
| PTY | AV |
| Vocal Effects | Format |
| USB Rec | Rec |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

Originalfernbedienung Ersatzfernbedienung

| Originalfernbedienung | Ersatzfernbedienung |
|-----------------------|---------------------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

