













 


 

 
 


 
 
 
 


 
 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject
	Source		AV
	Break		Smart
	Play		Play
	Stop		Stop
	Pause		Pause
	>>		>>
	<<		<<
	>>		>>
	<<		<<
	Menu		Menu
	Return		Back
	Setup		Options
	Enter		Ok
	Up		Up
	Down		Down

Originalfernbedienung Ersatzfernbedienung

	Right		Right
	Left		Left
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -
	Treble+		Ch +
	Treble-		Ch -
	O)/Audio		Dual
	[...]/Subtitle		Subt
	Angle		Yellow
	Visual Info		Red
	Visual Adjust		Green
	<		Shift + Left
	Color Mode		Format
	>		Shift + Right
	Image On/Off		Text
	Top Menu		Shift + Menu




Originalfernbedienung Ersatzfernbedienung

On Screen 1	On Screen	SEARCH TV/R	TV/R
Sleep 2	Sleep	PROG SLEEP	Sleep
Wide/Normal 3	Wide/Normal	ECO 3D	3D
Dimmer 4	Dimmer	APP MEDIA	Media
Sound Mode 6	Sound Mode	DISC NAV LIST	List
Progressive 9	Progressive	DISPLAY INFO	Info
Playback 0	Playback	FAV PRE-CH	Pre Ch
Repeat 5	Repeat	SHIFT + REPEAT TEXT	Shift + Text
Play Mode 8	Play Mode	SHIFT + PLAY MODE	Shift + Play
DVD Level +10	DVD Level	SHIFT + -/++ GUIDE	Shift + Guide
Cancel 7	Cancel	CLEAR EXIT	Exit
On Screen 1	1	1	1
Sleep 2	2	2	2
Wide/Normal 3	3	3	3
Dimmer 4	4	4	4
Repeat 5	5	5	5
Sound Mode 6	6	6	6

Originalfernbedienung Ersatzfernbedienung

Cancel 7	7	7	7
Play Mode 8	8	8	8
Progressive 9	9	9	9
Playback 0	0	0	0
DVD Level +10	+10	-/++ GUIDE	Guide

