



Originalfernbedienung Ersatzfernbedienung

	Standby/On		Power
	Open/Close		Eject / Surround
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Index		AV / Input / RDS
	Dimmer		Shift + Mute / Dimmer
	Prog		TV/Radio /
	Repeat		Green / APP / Repeat
	A-B/Freq/Text		Yellow / YouTube / Repeat

Originalfernbedienung Ersatzfernbedienung

	Pause		Pause / Step / Freeze
	Stop/Mode PTY		Stop / Hold
	Random/Start PTY Seek		Smart / List
	I<<		I<< / Preset-
	Play		Play / Slow
	>>I		>>I / Preset+
	Time/Info		Info / Angle
	Display		Display / Media
	Sleep		Sleep / Timer
	Folder Up		Up
	Left File		Left
	Enter		OK
	Right File		Right
	Folder Down		Down
	Preset Up		Shift + >>I / Preset+
	Vol+		Vol+
	Preset Down		Shift + I<< / Preset-





Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	Vol-		Vol-
	Band		Shift + Smart / List
	Tuner		Shift + 6
	CD		Shift + 3
	AUX		Shift + 7
	USB		Shift + 8
	Portable		Shift + Display / Media

Originalfernbedienung Ersatzfernbedienung

