


 

 
 


 



 



 

 



 

 















 







 

 

 

 



 





 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sleep		Sleep
	CBL/SAT		1
	Blu-ray		2
	DVD/Blu-ray		3
	Game		4
	Tv Audio		5
	Media Player		6
	Bluetooth		7
	AM		8
	FM		9
	CH+		Ch +
	CH-		Ch -
	Eco		3D
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute


 




 
Originalfernbedienung Ersatzfernbedienung

	Info		Info
	Option		Options
	Back		Back
	Setup		Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	CH Level		Dual
	Mode		Subt
	Memory		Pre Ch
	I<</Tune-		I<<
	Play		Play
	Pause		Pause
	Tune+ />>I		>>I
	Quick Select 1		Red





Originalfernbedienung Ersatzfernbedienung

QUICK SELECT 2	Quick Select 2		Green
QUICK SELECT 3	Quick Select 3		Yellow
QUICK SELECT 4	Quick Select 4		Blue
SOUND <	< Sound Mode		<<
SOUND >	Sound Mode >		>>
AUDIO DELAY +	Audio Delay+		Smart
AUDIO DELAY -	Audio Delay-		Media

Originalfernbedienung Ersatzfernbedienung

