



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open / Close		Eject
	HDD		Smart
	DVD		Media
	Prog +		Ch +
	Prog -		Ch -
	Input		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

Originalfernbedienung Ersatzfernbedienung

	Audio		Dual
	Clear		Exit
	Red		Red
	Green / Subtitle		Green
	Green / Subtitle		Subt
	Yellow / Angle		Yellow
	Yellow / Angle		Format
	Blue / Play Mode		Blue
	Blue / Play Mode		Shift + Play
	System Menu		D. Menu
	Title List / Top Menu		Shift + Menu
	Title List / Top Menu		List
	Guide		Guide
	Menu		Menu
	TV / DVD		TV/R
	Info		Info
	Up		Up





Originalfernbedienung Ersatzfernbedienung

	Right		Right
	Down		Down
	Left		Left
	Enter		Ok
	Return		Back
	Display		Shift + Info
	I<< / Page -		I<<
	<·		Shift + Left
	·>		Shift + Right
	>>I / Page +		>>I
	<< / Day - / <I / <II		<<
	Play		Play
	>> / Day + / I> / II>		>>
	TV Pause		Shift + Pause
	Pause		Pause
	Stop		Stop
	Rec		Rec

Originalfernbedienung Ersatzfernbedienung

	Rec Stop		Shift + Stop
	DUB HDD/DVD		Shift + Smart
	Rec Mode		Shift + Rec
	TV Vol +		Vol +
	TV Vol -		Vol -
	TV Prog +		Shift + Ch +
	TV Prog -		Shift + Ch -
	TV Power		Shift + Power
	TV Input		Shift + AV

