

 
 

 


 

 
 
 

 
 






 



 


 








 












Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Power		Power		1		1
	Mute		Mute		2		2
	Tv/AV		AV		3		3
	Multimedia		Media		4		4
	I/II		Dual		5		5
	List		List		6		6
	ARC		Options		7		7
	Menu		Menu		8		8
	PR+		Ch +		9		9
	PR-		Ch -		0		0
	Up		Up		PSM		Guide
	Down		Down		SSM		Pre Ch
	Right		Right		Split Zoom		Eject
	Left		Left		PIP/DW		3D
	OK		Ok		Sleep		Sleep
	Vol+		Vol +		[≡?]/Reveal		TV/R
	Vol-		Vol -		Text/*		Text





Originalfernbedienung Ersatzfernbedienung

WIN.SIZE	[≡♦]/Win. Size	PICTURE FORMAT	Format
MIX	[≡/]/Mix	E-MANUAL D.MENU	D. Menu
POSITION	[≡x]/Position	AD SUBT	Subt
TIME	[≡o]/Time	CLEAR EXIT	Exit
HOLD	[≡+]/Hold	RETURN BACK	Back
INDEX	[≡i]/Index	DISPLAY INFO	Info
PIP PR+	Green/PIP PR+	B	Green
PIP PR-	Red/PIP PR-	A	Red
SWAP	Yellow/Swap	C	Yellow
PIP INPUT	Blue/PIP Input	D	Blue

Originalfernbedienung Ersatzfernbedienung

