





 






Originalfernbedienung	Ersatzfernbedienung
 Rec Pause	 Pause
 CH+	 Ch +
 CH-	 Ch -
 EPG	 Guide
 AV Out/AV In	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Tv/Radio	 TV/R
 Recall	 Pre Ch

Originalfernbedienung	Ersatzfernbedienung
 Subt	 Subt
 TTX	 Text
 Audio	 Dual
 Menu	 Menu
 Exit	 Exit
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Mode	 Smart
 Rec List	 List
 Zoom	 Eject
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Play/Pause	 Play





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Rec		Rec
	Stop		Stop
	<</FAV		<<
	>>/Info		>>
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

