



 




 
 





 







 

 
 
 
 
 








 

 










Originalfernbedienung Ersatzfernbedienung

	Power		Power
	DVD		Media
	VCR		Smart
	TV		TV/R
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Go Back/Return		Back
	>>		>>
	<<		<<
	Clear		Exit
	Menu/i		Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok

Originalfernbedienung Ersatzfernbedienung

	Red/(·)/Lock		Red
	Green/Timer/[...]		Green
	Yellow/Info		Yellow
	Blue/Guide		Blue
	Violet/Camera		Pre Ch
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	AV		AV
	Play Mode		Shift + Play






 
 


 

 
 

 
 

 
 



 

 





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	<<		<<
	Play		Play
	>>		>>
	Record		Rec
	Stop		Stop
	Pause		Pause
	Again/SP/LP		Options
	Zoom/Index		Info
	Open/Close		Eject




 

 


 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	DVD		Media
	VCR		Smart
	TV		TV/R
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Go Back/Return		Back
	PR+		Ch +
	PR-		Ch -
	Clear		Exit
	Menu/i		Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok

Originalfernbedienung Ersatzfernbedienung

	Red/(·)/Lock		Red
	Green/Timer/[...]		Green
	Yellow/Info		Yellow
	Blue/Guide		Blue
	Violet/Camera		Pre Ch
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	AV		AV
	Play Mode		Shift + Play








 




 




 


 
 


 
 

 






 



Originalfernbedienung Ersatzfernbedienung

	<<		<<
	Play		Play
	>>		>>
	Record		Rec
	Stop		Stop
	Pause		Pause
	Again/SP/LP		Options
	Zoom/Index		Info
	Open/Close		Eject








 

 


Originalfernbedienung Ersatzfernbedienung




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	DVD		Media
	VCR		Smart
	TV		TV/R
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Go Back/Return		Back
	PR+		Ch +
	PR-		Ch -
	Clear		Exit
	Menu/i		Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok











Originalfernbedienung Ersatzfernbedienung

	Red/(·)/Lock		Red
	Green/Timer/[...]		Green
	Yellow/Info		Yellow
	Blue/Guide		Blue
	Violet/Camera		Pre Ch
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	AV		AV
	<<		<<





Originalfernbedienung Ersatzfernbedienung

	Play		Play
	>>		>>
	Record		Rec
	Stop		Stop
	Pause		Pause

Originalfernbedienung Ersatzfernbedienung

