


**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Back		Back
	Fav		Pre Ch
	Menu		Menu
	Exit		Exit
	EPG		Guide






 

 
 

 
 
 


 
 
 

 
**Originalfernbedienung    Ersatzfernbedienung**

	i		Info
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	OK / List		Ok
	OK / List		List
	V +		Vol +
	V -		Vol -
	TV / R		TV/R
	SAT		AV
	P +		Ch +
	P -		Ch -
	Red / F1		Red
	Green / F2		Green
	Yellow / F3		Yellow
	Blue / F4		Blue





Originalfernbedienung Ersatzfernbedienung

	Audio		Dual
	Subtitle		Subt
	Text		Text
	Pause		Pause
	UHF		Format
	Parab		3D
	M1	 + 	Shift + 1
	N / P		Options
	Timer / Sleep	 + 	Shift + Power

Originalfernbedienung Ersatzfernbedienung