

 

 

 

 

 

 

 

 

 

 



 













**Originalfernbedienung    Ersatzfernbedienung**

|   |          |   |                    |
|---|----------|---|--------------------|
|    | Standby  |    | Power              |
|    | Mute     |    | Mute / Dimmer      |
|    | 1        |    | 1                  |
|    | 2        |    | 2                  |
|    | 3        |    | 3                  |
|    | EPG      |    | Guide / EPG / -/-- |
|    | 4        |    | 4                  |
|    | 5        |    | 5                  |
|    | 6        |    | 6                  |
|    | Audio    |    | Audio / Lang /II   |
|    | 7        |    | 7                  |
|  | 8        |  | 8                  |
|  | 9        |  | 9                  |
|  | Subtitle |  | Subtitle / EQ      |
|  | Info     |  | Info / Angle       |
|  | 0        |  | 0                  |
|  | Recall   |  | Back / Return      |

**Originalfernbedienung    Ersatzfernbedienung**

|   |            |   |                       |
|---|------------|---|-----------------------|
|    | TV / Radio |    | TV/Radio /            |
|    | Menu       |    | Menu / Home           |
|    | Up         |    | Up                    |
|    | Exit       |    | Exit / Cancel / Clear |
|    | Left       |    | Left                  |
|    | OK         |    | OK                    |
|    | Right      |    | Right                 |
|    | Record     |    | Rec / Rec Mode        |
|    | Down       |    | Down                  |
|    | Stop       |    | Stop / Hold           |
|    | Vol +      |    | Vol+                  |
|  | CH +       |  | CH+ / Page+           |
|  | Vol -      |  | Vol-                  |
|  | TTX        |  | Text / Goto           |
|  | FAV        |  | Fav / Marker / PC     |
|  | CH -       |  | CH- / Page-           |
|  | Media      |  | Display / Media       |



