


 












 



 

 
 

 

 






 


 


 

 



 
 
 



 



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sleep		Sleep
	Display		Info
	Tape >		Right
	< Tape		Left
	<< Tape		Down
	>> Tape		Up
	Stop Tape		Ok
	Random		Media
	Clear		Exit
	P.Mode		Format
	Edit		Back
	1		1
	2		2
	3		3
	4		4
	5		5


 








Originalfernbedienung Ersatzfernbedienung

	6		6
	7		7
	8		8
	9		9
	0		0
	+10/PTY Search		Guide
	O.T.E.		Pre Ch
	>>I P.Call		>>I
	I<< P.Call		I<<
	Stop CD		Stop
	Play CD		Play
	Pause CD		Pause
	Play MD		Shift + Play
	Pause MD		Shift + Pause
	Stop MD		Shift + Stop
	Tuner/Band		TV/R
	PTY		Options





Originalfernbedienung Ersatzfernbedienung

 RDS Display	 Subt
 TA/News/Info	 3D
 Input	 AV
 N.B./Tone	 Dual
 Control Volume	 Vol +
 Control Volumen Down	 Vol -
 Mute	 Mute

Originalfernbedienung Ersatzfernbedienung

