




Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------------------------|---|-----------------------|
|  | Power CD |  | Power |
|  | Power |  | 9 |
|  | Power USB/Audio |  +  | Shift + Power |
|  | Open/Close |  | Eject / Surround |
|  | Bluetooth/FM |  +  | Shift + 9 |
|  | CD |  | 3 |
|  | USB/Audio In |  | 8 |
|  | Album/Preset Up |  | Up |
|  | Album/Preset Up Bluetooth/FM |  +  | CH+ / Page+ |
|  | Album/Preset Up USB/Audio In |  +  | Shift + Up |
|  | I<< CD |  | I<< / Preset- |
|  | I<< Bluetooth/FM |  +  | Shift + Left |
|  | I<< USB/Audio In |  | Left |
|  | Play CD |  | Play / Slow |
|  | Pause CD |  | Pause / Step / Freeze |
|  | Play/Pause USB/Audio In |  +  | Shift + Play / |
|  | >>I CD |  | >>I / Preset+ |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------------------------|---|-----------------------------|
|  | >>I Bluetooth/FM |  +  | Shift + >>I / Preset+ |
|  | >>I USB/Audio In |  +  | Shift + I<< / Preset- |
|  | Album/Preset Down CD |  | Down |
|  | Album/Preset Down |  | CH- / Page- |
|  | Album/Preset Down USB/Audio |  +  | Shift + Down |
|  | Repeat |  | Green / APP / Repeat |
|  | Repeat USB/Audio |  | Back / Return |
|  | Vol+ |  | Vol+ |
|  | Stop CD |  | Stop / Hold |
|  | Stop USB/Audio In |  +  | Shift + Stop / |
|  | Vol- |  | Vol- |
|  | Shuffle |  | Blue / Prime Video / Random |
|  | Shuffle USB/Audio In |  | AV / Input / RDS |
|  | Mute |  | Mute / Dimmer |
|  | Display |  | Display / Media |
|  | Display USB/Audio In |  +  | Shift + Display / Media |
|  | Prog |  | TV/Radio / |





Originalfernbedienung Ersatzfernbedienung

| Originalfernbedienung | Ersatzfernbedienung |
|-------------------------|---|
| PROG Prog USB/Audio In | SHIFT + PROGRAM TV/RADIO Shift + TV/Radio / Program |
| SOUND Sound | TITLE SOUND Sound / Title |
| CLOCK Clock | SHIFT + TIMER SLEEP Shift + Sleep / Timer |
| TIMER SLEEP Sleep/Timer | TIMER SLEEP Sleep / Timer |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

Originalfernbedienung Ersatzfernbedienung

| Originalfernbedienung | Ersatzfernbedienung |
|-----------------------|---------------------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

