



Originalfernbedienung Ersatzfernbedienung

1	1	1	1
2	2	2	2
3	3	3	3
4	4	4	4
5	5	5	5
6	6	6	6
7	7	7	7
8	8	8	8
9	9	9	9
0	0	0	0
ZOOM	Zoom	ZOOM	Eject
MENU	Menu	TOP MENU MENU	Menu
AUDIO	Audio	SOUND DUAL	Dual
SUBTITLE	Subtitle	AD SUBT	Subt
TITLE	Title	DISPLAY INFO	Info
MODE	Mode	FAV PRE-CH	Pre Ch
SETUP	Setup	SETTINGS OPT	Options

Originalfernbedienung Ersatzfernbedienung

A-B	A-B	ECO 3D	3D
ANGLE	Angle	HOME SMART	Smart
REPEAT	Repeat	REPEAT TEXT	Text
OSD	OSD	APP MEDIA	Media
RETURN	Return	RETURN BACK	Back
ENTER	Enter	OK	Ok
VOL-	Vol-	VOL -	Vol -
VOL+	Vol+	+ VOL	Vol +
MUTE	Mute	MUTE	Mute
Stop	Stop	Stop	Stop
Play	Play	PLAY MODE	Play
Pause	Pause	Pause	Pause
<<	<<	<<	<<
>>	>>	>>	>>
<<	<<	Left	Left
>>	>>	Right	Right
I<<	I<<	I<<	I<<





Originalfernbedienung Ersatzfernbedienung

	>>I		>>I
	I<<		Up
	>>I		Down

Originalfernbedienung Ersatzfernbedienung

