





 

 
 
 

 
 
 
 
 

 
 
 
 
 

 

 

 

 







**Originalfernbedienung Ersatzfernbedienung**

	Standby		Power
	TV / Radio		TV/R
	TV Guide		Guide
	Mute		Mute
	ATV		Shift + Smart
	USB		Media
	DVD		Smart
	Eject		Eject
	Rec		Rec
	Rec List		Shift + Rec
	I<<		I<<
	>>I		>>I
	Stop		Stop
	<<		<<
	>>		>>
	Play / Pause		Play
	Play / Pause		Pause

**Originalfernbedienung Ersatzfernbedienung**

	Source / AV		AV
	Info		Info
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	OK		Ok
	Menu		Menu
	Exit		Exit
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8





**Originalfernbedienung    Ersatzfernbedienung**

	9		9
	0		0
	Recall		Back
	Fav		Pre Ch
	Vol +		Vol +
	Vol -		Vol -
	Subtitle		Subt
	Aspect		Format
	Audio		Dual
	Sleep		Sleep
	CH +		Ch +
	CH -		Ch -
	Red / Goto		Red
	Green / A-B		Green
	Yellow / Angle		Yellow
	Blue / Repeat		Blue
	Blue / Repeat		Shift + Text

**Originalfernbedienung    Ersatzfernbedienung**

	D.Dis		Shift + Info
	Zoom		Shift + Eject
	Size		3D
	Display (Power)		Shift + Power
	Text / D.Setup		Text
	Text / D.Setup		Options
	Index / D.Menu		D. Menu
	Reveal / Title		List
	Hold		Shift + Pause

