






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	TV / SAT		Shift + TV/Radio / Program
	Pause		Pause / Step / Freeze
	Sleep		Sleep / Timer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	RCL		Setup / OPT /
	0		0
	EPG		Guide / EPG / -/--
	Menu		Menu / Home


Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Mode		D.Menu / Top
	Left		Left
	OK		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	TV / Rad		TV/Radio /
	Color		Picture / Format
	i		Info / Angle
	Help		Shift + Info / Angle
	Mute		Mute / Dimmer
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat





Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung
	Blue / Prime Video / Random

Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung

