




 

 














 

 

 

 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Repeat		Green / APP / Repeat
	A-B		Yellow / YouTube / Repeat
	Open / Close		Eject / Surround
	N / P		Text / Goto
	1		1
	2		2
	3		3
	Subtitle		Subtitle / EQ
	4		4
	5		5
	6		6
	Angle		Info / Angle
	7		7
	8		8
	9		9
	Language		Audio / Lang I/II

Originalfernbedienung Ersatzfernbedienung

	0		0
	10+		Guide / EPG / -/-
	Time		Sleep / Timer
	Setup		Setup / OPT /
	Up		Up
	Title		Sound / Title
	Left		Left
	Enter		OK
	Right		Right
	PBC		D.Menu / Top
	Down		Down
	Menu		Menu / Home
	Vol -		Vol-
	Zoom		Zoom / Size
	Vol +		Vol+
	Return		Back / Return
	USB		Shift +
			8



