



















 




**Originalfernbedienung    Ersatzfernbedienung**

	DVD Power		Power
	Drive Select		D. Menu
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Delete *		Shift + Exit
	Input Select		AV
	CH+		Ch +
	CH-		Ch -
	Prog/Check		Smart

**Originalfernbedienung    Ersatzfernbedienung**

	Manual Skip		Shift + Right
	I<< Skip		I<<
	Skip >>I		>>I
	<< / Slow/Search		<<
	>> / Slow/Search		>>
	Stop		Stop
	Pause		Pause
	Play		Play
	Status / i		Info
	Exit		Exit
	Direct Navigator		Media
	Function Menu		Menu
	Guide		Guide
	Up		Up
	Down		Down
	Right/II>		Right
	Left/<II		Left













Originalfernbedienung Ersatzfernbedienung

	OK		Ok
	Option		Options
	Return		Back
	Red		Red
	Green		Green
	Yellow/Create Chapter		Yellow
	Blue		Blue
	Rec		Rec
	Rec Mode		Shift + Rec
	Audio		Dual
	Direct Tv Rec		TV/R
	Text		Text
	STTL		Subt
	Display		Shift + Info
	Time Slip		Sleep
	TV Power		Shift + Power
	TV AV		Shift + AV

Originalfernbedienung Ersatzfernbedienung

	TV CH +		Shift + Ch +
	TV CH -		Shift + Ch -
	TV Vol +		Vol +
	TV Vol -		Vol -

