



Originalfernbedienung Ersatzfernbedienung

|   |              |   |       |
|---|--------------|---|-------|
|    | Power        |    | Power |
|    | Open / Close |    | Eject |
|    | 1            |    | 1     |
|    | 2            |    | 2     |
|    | 3            |    | 3     |
|    | 4            |    | 4     |
|    | 5            |    | 5     |
|    | 6            |    | 6     |
|    | 7            |    | 7     |
|    | 8            |    | 8     |
|   | 9            |   | 9     |
|  | 0            |  | 0     |
|  | 10 +         |  | Guide |
|  | Display      |  | Info  |
|  | Subtitle     |  | Subt  |
|  | Vol +        |  | Vol + |
|  | Vol -        |  | Vol - |

Originalfernbedienung Ersatzfernbedienung

|   |              |   |               |
|---|--------------|---|---------------|
|    | Search       |    | TV/R          |
|    | Setup        |    | Options       |
|    | Title        |    | List          |
|    | Up           |    | Up            |
|    | Right        |    | Right         |
|    | Down         |    | Down          |
|    | Left         |    | Left          |
|    | Enter        |    | Ok            |
|    | PBC          |    | Smart         |
|    | Menu         |    | Menu          |
|   | Audio        |   | Dual          |
|  | Zoom         |  | Shift + Eject |
|  | USB / Card   |  | Media         |
|  | Step II >    |  | Shift + Pause |
|  | Stop         |  | Stop          |
|  | Play / Pause |  | Play          |
|  | Play / Pause |  | Pause         |



