







 





 
 




 



 

 

 

 













 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV / Input / RDS
	Teletext		Text / Goto
	Split		Display / Media
	Subtitle		Subtitle / EQ
	Aspect		Picture / Format
	Green		Green / APP / Repeat
	Red / Demo		Red / Netflix / Search
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Guide		Guide / EPG / -/--
	Info		Info / Angle
	Up		Up
	Right		Right
	Down		Down
	OK		OK
	Option		Setup / OPT /

Originalfernbedienung Ersatzfernbedienung

	Left / Back		Left
	Left / Back		Back / Return
	Vol +		Vol+
	Menu / Browse / Exit		Menu / Home
	Menu / Browse / Exit		Exit / Cancel / Clear
	Vol -		Vol-
	Mute		Mute / Dimmer
	P +		CH+ / Page+
	P -		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8





Originalfernbedienung Ersatzfernbedienung

9	9	BLUETOOTH 9	9
0	0	HDMI - BAT 0	0
P=P	P <--> P	PC FAV MARKER	Fav / Marker / PC
MHEG CANCEL	MHEG / Cancel	LIST SMART	Smart / List

Originalfernbedienung Ersatzfernbedienung

