



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	AV		AV / Input / RDS
	Up		Up
	P+		CH+ / Page+
	Right		Right
	Vol+		Vol+
	Left		Left

Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol-
	OK		OK
	Down		Down
	P-		CH- / Page-
	i		Info / Angle
	CL		D.Menu / Top
	Mute		Mute / Dimmer
	TXT		Text / Goto
	Red		Red / Netflix / Search
	Rec		Rec / Rec Mode
	Green		Green / APP / Repeat
	Timer		Sleep / Timer
	Yellow		Yellow / YouTube / Repeat
	Picture		Picture / Format
	Blue		Blue / Prime Video / Random
	Sound		Sound / Title
	(I)-		Shift + CH- / Page-





Originalfernbedienung Ersatzfernbedienung

	(I)+	 + 	Shift + CH+ /
	*-		<< / Preset-
	*+		>> / Preset+
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Pause		Pause / Step / Freeze
	Index + <<	 + 	Shift + << /
	Index + >	 + 	Shift + >> /
	Stop		Stop / Hold

Originalfernbedienung Ersatzfernbedienung

