



Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Source		AV / Input / RDS
	Home		Shift + Menu /
	e		D.Menu / Top
	Mouse		Info / Angle
	TV / Radio		TV/Radio /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Display		Display / Media
	0		0

Originalfernbedienung Ersatzfernbedienung

	Recall		Back / Return
	Recall		Fav / Marker / PC
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Play / Pause		Play / Slow
	Play / Pause		Pause / Step / Freeze
	Down		Down
	Stop		Stop / Hold
	Vol +		Vol+
	TXT		Text / Goto
	CH +		CH+ / Page+
	Vol -		Vol-
	Mute		Mute / Dimmer



