


 
 








 




Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	ZZZ		Shift + Power
	Recall		Back
	Vol +		Vol +
	Vol -		Vol -
	Audio		Shift + Subt

Originalfernbedienung Ersatzfernbedienung

	Picture		Format
	DVD Setup / DVB Menu		D. Menu
	CH +		Ch +
	CH -		Ch -
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	Enter		Ok
	LCD Menu		Menu
	Mute		Mute
	Eject / Auto		Shift + Exit
	Play / Pause		Play
	Play / Pause		Pause
	Play / Pause		Shift + Pause
	Stop / Exit		Stop
	Stop / Exit		Exit




 






**Originalfernbedienung Ersatzfernbedienung**

	<< / Text		<<
	<< / Text		Text
	>> / Hold / FAV		>>
	>> / Hold / FAV		Pre Ch
	I<< / [=i]		I<<
	>>I / Size		>>I
	Title / Lang		Shift + Dual
	Go / Fav +		Shift + Up
	Zoom / Fav -		Shift + Down
	Zoom / Fav -		3D
	Subtitle / [=o]		Subt
	Menu / Guide		Guide
	Angle / [=?]		Shift + Format
	Menu / Guide		Shift + Menu
	Info		Info
	Red / Program		Red
	Audio I-II		Dual

**Originalfernbedienung Ersatzfernbedienung**

	Green / Intro		Green
	Yellow / Recall		Yellow
	Blue / A-B		Blue

