



Originalfernbedienung    Ersatzfernbedienung

	Power		Power
	V-Mode		D.Menu / Top
	Mute		Mute / Dimmer
	SAT		Shift + 0
	SAT		Display / Media
	TV / AV		AV / Input / RDS
	Zoom		Zoom / Size
	Sleep		Sleep / Timer
	1		1
	2		2
	3		3
	FAV		Fav / Marker / PC
	4		4
	5		5
	6		6
	Pause		Pause / Step / Freeze
	7		7





 

 

 
 










 





 







Originalfernbedienung    Ersatzfernbedienung

	8		8
	9		9
	Page +		Shift + CH+ /
	TV / Radio		TV/Radio /
	0		0
	<-- PR		Back / Return
	Page -		Shift + CH- /
	Up / PR +		CH+ / Page+
	Up / PR +		Up
	Left / Vol -		Left
	Left / Vol -		Vol-
	OK / List		Smart / List
	OK / List		OK
	Right / Vol +		Right
	Right / Vol +		Vol+
	Down / PR -		CH- / Page-
	Down / PR -		Down



 





Originalfernbedienung Ersatzfernbedienung

	Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	Info		Info / Angle
	EPG		Guide / EPG / -/--
	Red / Find		Red / Netflix / Search
	Green / V-Format		Picture / Format
	Green / V-Format		Green / APP / Repeat
	Yellow / TXT		Text / Goto
	Yellow / TXT		Yellow / YouTube / Repeat
	Blue / Audio		Audio / Lang I/II
	Blue / Audio		Blue / Prime Video / Random
	Record		Rec / Rec Mode
	Play		Play / Slow
	Stop		Stop / Hold
	Shift		Setup / OPT /
	<< Fast		<< / Tune-
	>> Fast		>> / Tune+

Originalfernbedienung Ersatzfernbedienung

	< Slow		I<< / Preset-
	> Slow		>>I / Preset+

