 

 









 



















 























 

 

 



 

 





**Originalfernbedienung    Ersatzfernbedienung**

	Muting		Mute / Dimmer
	Power		Power
	Up		Up
	FQ. +		Shift + Vol+
	Left		Left
	MPX		Audio / Lang I/II
	Enter		OK
	Disp. Mode		Display / Media
	Right		Right
	Vol -		Vol-
	Down		Down
	FQ. -		Shift + Vol-
	Vol +		Vol+
	Channel -		CH- / Page-
	Channel +		CH+ / Page+
	DVD / LD		Shift + 2
	TV / Sat		Shift + 1

**Originalfernbedienung    Ersatzfernbedienung**

	CD		Shift + 3
	VCR 1		Shift + 4
	TV Control		TV/Radio /
	Tuner		Shift + 6
	VCR 2		Shift + 7
	MD / Tape		Shift + 5
	1		1
	Dolby		Sound / Title
	2		2
	DSP Mode		Smart / List
	3		3
	4		4
	Midnight		Sleep / Timer
	5		5
	CH. Select		Fav / Marker / PC
	6		6
	Test Tone		Text / Goto



