



**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	SD Card		Shift + Media
	Input TV		Shift + AV
	Input AV		AV
	Menu		Menu
	Aspect		Format
	Viera Cast		Shift + Smart
	Direct TV Rec		Shift + Rec
	i		Info
	Exit		Exit
	Viera Tools		Smart
	Viera Link		Media
	Guide		Guide
	Up		Up
	Left		Left
	OK		Ok
	Right		Right

**Originalfernbedienung    Ersatzfernbedienung**

	Down		Down
	Option		Options
	Back/Return		Back
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Text		Text
	STTL		Subt
	Index		Shift + Info
	Hold		Shift + Stop
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6





**Originalfernbedienung Ersatzfernbedienung**

	7		7
	8		8
	9		9
	0		0
	Mute		Mute
	Last View		Pre Ch
	Vol+		Vol +
	Vol-		Vol -
	CH +		Ch +
	CH -		Ch -
	Power (lower)		Shift + Power
	Rec		Rec
	Programme -		Shift + Ch -
	Programme +		Shift + Ch +
	<<		<<
	l<<		l<<
	Play		Play

**Originalfernbedienung Ersatzfernbedienung**

	>>		>>
	>>l		>>l
	Stop		Stop
	Pause/Step		Pause





**Originalfernbedienung    Ersatzfernbedienung**

	Power (lower)		Power
	Rec		Rec
	Programme -		Ch -
	Programme +		Ch +
	<<		<<
	I<<		I<<
	Play		Play
	>>		>>
	>>I		>>I
	Stop		Stop
	Pause/Step		Pause

**Originalfernbedienung    Ersatzfernbedienung**


