










 


 


 

 




 

 
 



 



 

 













 







 










**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	FAV		Pre Ch
	TV / RAD		TV/R
	SUB		Subt
	Mute		Mute
	Up / Channel +		Up
	Up / Channel +		Ch +
	Down / Channel -		Down
	Down / Channel -		Ch -
	Right / Vol +		Right
	Right / Vol +		Vol +
	Left / Vol -		Left
	Left / Vol -		Vol -
	OK / Play		Ok
	OK / Play		Play
	Text		Text
	Sat / Stop		Media

**Originalfernbedienung    Ersatzfernbedienung**

	Sat / Stop		Stop
	Back		Back
	Menu		Menu
	i / Rec		Info
	i / Rec		Rec
	EPG		Guide
	Page + / >>		>>
	Page - / <<		<<
	AV		AV
	Audio		Dual
	Pause		Pause
	Red / Contrast -		Red
	Green / Contrast		Green
	Yellow / Brightness -		Yellow
	Blue / Brightness		Blue
	1		1
	2		2





Originalfernbedienung    Ersatzfernbedienung

<b>3</b>	3	<b>3</b>	3
<b>4</b>	4	<b>4</b>	4
<b>5</b>	5	<b>5</b>	5
<b>6</b>	6	<b>6</b>	6
<b>7</b>	7	<b>7</b>	7
<b>8</b>	8	<b>8</b>	8
<b>9</b>	9	<b>9</b>	9
<b>0</b>	0	<b>0</b>	0

Originalfernbedienung    Ersatzfernbedienung