




 





 



 

 



 

 





 

 

 
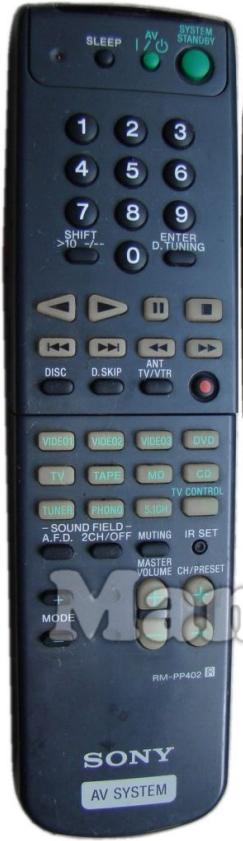


Originalfernbedienung	Ersatzfernbedienung
 System Standby	 Power
 Sleep	 Sleep
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 +10	 Guide
 Video 1	 Shift + 1
 Video 2	 Shift + 2
 Video 3	 Shift + 3
 DVD	 Shift + 4

Originalfernbedienung	Ersatzfernbedienung
 TV	 Shift + 5
 Tape	 Shift + 6
 MD	 Shift + 7
 CD	 Shift + 8
 Tuner	 Shift + Guide
 Phono	 Shift + 9
 5.1 CH	 Shift + 0
 Sound Field	 Smart
 Sound Field 2CH / Off	 Media
 Mode +	 >>
 Mode -	 <<
 Mute	 Mute
 Master Volume	 Vol +
 Master Volume	 Vol -
 CH/Preset +	 Ch +
 CH/Preset -	 Ch -
 Up	 Up





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Left		Left
	Right		Right
	Down		Down
	Cursor Mode		Options
	Bass Boost		Dual
	EQ		Subt
	Test Tone		TV/R
	Rear +		Shift + Up
	Rear -		Shift + Down
	Center +		Shift + Right
	Center -		Shift + Left

