


















 




 









**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	I<<		I<< / Preset-
	Eject		Eject / Surround
	<<		<< / Tune-
	>>		>> / Tune+
	>>		>>  / Preset+
	Play / Pause		Play / Slow
	Play / Pause		Pause / Step / Freeze
	TV/TXT /		Setup / OPT /
	TV/TXT /		Shift + Text /
	Cancel / Zoom		Shift + Exit / Cancel / Clear
	Reveal / Subtitle		Shift + Subtitle / EQ
	Stop		Stop / Hold
	Hold / Menu		Shift + Stop /
	Hold / Menu		Shift + Menu /
	Size / Angle		Zoom / Size
	Subpage / Title		Shift + Sound / Title

**Originalfernbedienung    Ersatzfernbedienung**

	Index / Goto		Info / Angle
	Red / Program		Red / Netflix / Search
	Green / Slow		Green / APP / Repeat
	Yellow / Repeat		Yellow / YouTube / Repeat
	Blue / A-B		Blue / Prime Video / Random
	CH +		CH+ / Page+
	Sys-Menu		Menu / Home
	Vol +		Vol+
	CH -		CH- / Page-
	Input / Sourc		AV / Input / RDS
	Vol -		Vol-
	DVD		Shift + 2
	DVD-Setup		D.Menu / Top
	Up		Up
	Left		Left
	OK		OK
	Right		Right





 

 






 

 


 

 









**Originalfernbedienung    Ersatzfernbedienung**

	Down		Down
	DVB		Smart / List
	Sys-Exit		Exit / Cancel / Clear
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/--		Shift + Guide / EPG / -/--
	0		0
	Recall		Back / Return
	Picture		Picture / Format
	Sound		Sound / Title

**Originalfernbedienung    Ersatzfernbedienung**

	Nicam / A2		Audio / Lang I/II
	Mute		Mute / Dimmer
	Sleep		Sleep / Timer
	TV / Radio		TV/Radio /
	FAV		Fav / Marker / PC
	Fav +		Shift + CH+ /
	Fav -		Shift + CH- /
	Pic. Format		Shift + Picture / Format
	Subtitle		Subtitle / EQ
	Text		Text / Goto
	Display		Display / Media
	Language		Shift + Audio / Lang I/II
	EPG		Guide / EPG / -/--

