



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Goto		Smart
	Open/Close		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	10+		Guide
	Zoom+		Ch +
	Zoom-		Ch -
	Vol+		Vol +

Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol -
	Mute		Mute
	<</REV		<<
	>>/FWD		>>
	<</Prev		<<
	>>/Next		>>
	Play		Play
	Pause		Pause
	Stop		Stop
	Step		Pre Ch
	Menu		Menu
	Title		Info
	Setup		Options
	PBC		Yellow
	Up		Up
	Down		Down
	Right		Right





Originalfernbedienung Ersatzfernbedienung Originalfernbedienung Ersatzfernbedienung

	Left		Left		
	OK		Ok		
	OSD		List		
	Angle		AV		
	Subtitle		Subt		
	Video		TV/R		
	A-B		Media		
	Prog		Sleep		
	Return		Back		
	Repeat		Text		
	Slow		Format		
	Audio		Dual		
	N/P		3D		
	Clear		Exit		

