 






 

 
 


 


 
 



 







Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|-----------------------|
|  | On |  | Power |
|  | Off |  | Shift + Power |
|  | CD |  | 3 |
|  | MP |  | 8 |
|  | Tuner |  | 6 |
|  | Discphono |  | 1 |
|  | Tape 1 |  | 2 |
|  | Tape 2 |  | 5 |
|  | AUX |  | 7 |
|  | Video |  | 4 |
|  | Info |  | Info / Angle |
|  | Sleep |  | Sleep / Timer |
|  | Scan Tune >> |  | >> / Tune+ |
|  | Mute |  | Mute / Dimmer |
|  | Vol+ |  | Vol+ |
|  | << Scan Tune |  | << / Tune- |
|  | DIM |  | Shift + Mute / Dimmer |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------------|---|-----------------------------|
|  | Vol- |  | Vol- |
|  | SPK A/CD |  | CH+ / Page+ |
|  | Up |  | Up |
|  | SPK B/USB |  | CH- / Page- |
|  | Left |  | Left |
|  | Enter |  | OK |
|  | Right |  | Right |
|  | Down |  | Down |
|  | Tone DFT/OPT |  | Setup / OPT / |
|  | I<< Preset |  | I<< / Preset- |
|  | Play/AM/FM/DB |  | Play / Slow |
|  | Preset >>I |  | >>I / Preset+ |
|  | Red/Rand/Tuner |  | Red / Netflix / Search |
|  | Green/RPT/Blen |  | Green / APP / Repeat |
|  | Yellow/Prog/Memo |  | Yellow / YouTube / Repeat |
|  | Blue/Clear/Delete |  | Blue / Prime Video / Random |

 





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------|---|-------------------|
|  | On |  | Power |
|  | Off |  | Shift + Power |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | Disp |  | Display / Media |
|  | 0 |  | 0 |
|  | +10 |  | Guide / EPG / -/- |
|  | >> |  | >> / Tune+ |
|  | Mute |  | Mute / Dimmer |
|  | Vol+ |  | Vol+ |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------------|---|-----------------------|
|  | << |  | << / Tune- |
|  | DIM |  | Shift + Mute / Dimmer |
|  | Vol- |  | Vol- |
|  | SPK A / CD |  | CH+ / Page+ |
|  | Up |  | Up |
|  | SPK B / USB |  | CH- / Page- |
|  | Left |  | Left |
|  | Enter |  | OK |
|  | Right |  | Right |
|  | Menu / SRC |  | D.Menu / Top |
|  | Down |  | Down |
|  | Tone DFT / OPT |  | Setup / OPT / |
|  | Open/Close/Autot |  | Eject / Surround |
|  | Stop |  | Stop / Hold |
|  | Pause |  | Pause / Step / Freeze |
|  | I<< |  | I<< / Preset- |
|  | Play |  | Play / Slow |





Originalfernbedienung Ersatzfernbedienung

| | |
|---|---|
|  >> |  >> / Preset+ |
|  Red/Rand/Tuner |  Red / Netflix / Search |
|  Green/RPT/Blen |  Green / APP / Repeat |
|  Yellow/Prog/Memo |  Yellow / YouTube / Repeat |
|  Blue/Clear/Delete |  Blue / Prime Video / Random |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

Originalfernbedienung Ersatzfernbedienung

| | |
|--|--|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|-----------|---|-----------------------|
| | On | | Power |
| | Off | + | Shift + Power |
| | Disp/Info | | Info / Angle |
| | Mute | | Mute / Dimmer |
| | Vol+ | | Vol+ |
| | DIM | + | Shift + Mute / Dimmer |
| | Vol- | | Vol- |
| | Up | | Up |
| | Left | | Left |
| | Enter | | OK |
| | Right | | Right |
| | Menu/SRC | | Menu / Home |
| | Down | | Down |
| | Stop | | Stop / Hold |
| | Pause | | Pause / Step / Freeze |
| | I<< | | I<< / Preset- |
| | Play | | Play / Slow |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|----------------|--|------------------------|
| | >>I | | >>I / Preset+ |
| | Red/Rand/Tuner | | Red / Netflix / Search |
| | Green/RPT/Blen | | Green / APP / Repeat |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |


 



 


 
 

 

 


 

 

 




Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|---------------|
|  | On |  | Power |
|  | Off |  | Shift + Power |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | Disp/Info |  | Info / Angle |
|  | 0 |  | 0 |
|  | Tune Scan >> |  | >> / Tune+ |
|  | Mute |  | Mute / Dimmer |
|  | Vol+ |  | Vol+ |
|  | << Scan Tune |  | << / Tune- |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------------|---|-----------------------------|
|  | Vol- |  | Vol- |
|  | Up |  | Up |
|  | Left |  | Left |
|  | Enter |  | OK |
|  | Right |  | Right |
|  | Down |  | Down |
|  | I<< Preset |  | I<< / Preset- |
|  | Play/AM/FM/DB |  | Play / Slow |
|  | Preset >>I |  | >>I / Preset+ |
|  | Red/Rand/Tuner |  | Red / Netflix / Search |
|  | Green/RPT/Blen |  | Green / APP / Repeat |
|  | Yellow/Prog/Memo |  | Yellow / YouTube / Repeat |
|  | Blue/Clear/Delete |  | Blue / Prime Video / Random |

