



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Input		AV
	TV / TXT		Text
	Cancel		Shift + Exit
	Hold		Shift + Stop
	Size		Eject
	Subpage		Shift + Subt
	Reveal		Options
	<< REW		<<
	>> FF		>>
	I<< Preview		I<<
	>>I Next		>>I
	Play / Pause		Play
	Play / Pause		Pause
	Stop		Stop
	Picture		Shift + Format

Originalfernbedienung Ersatzfernbedienung

	Sound		Shift + Dual
	I-II / Nicam/A2		Dual
	Sleep		Sleep
	Subtitle		Subt
	Pic Format		Format
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Menu		Menu
	EPG		Guide
	Up		Up
	Left		Left
	OK / Enter		Ok
	Right		Right
	Down		Down
	Exit		Exit



